



Specialists for intrinsically safe
& explosion proof equipment


Static Discharge Reels

VESX/..

Data Sheet

For technical support please contact our customer services department.

Telephone : +44 1260 297274
Fax : +44 1260 297280
E-mail : info@extronics.com

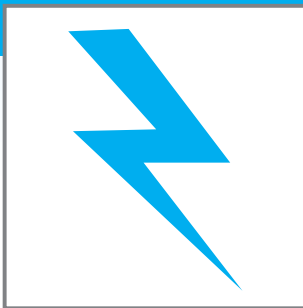

Cenelectrex®

Static-Discharge Reels

(ATEX approved)

Designed to provide safe and reliable earthing of drums, containers and mobile tanks, these heavy duty Static Discharge Reels are totally self-contained in a cross-bonded conductive housing incorporating a dual-foot mounting bracket.

Compact and simple to install, they provide a means of eliminating the danger of static accumulation and prevent the cable from becoming tangled. The multicore static discharge cable may be pulled out to the required working length using the instant lock and release mechanism.



Available in a range of clamp / cable / length options, these reels are ideal for arduous working environments. The cable is completely retracted into the housing when not in use to reduce the risk of operator injury due to tripping etc.

- Self-Retracting mechanism
- Durable, rugged construction
- Positive ratchet lock
- Hard wearing polyester paint finish

Static-Discharge Reels

SPECIFICATIONS FOR STATIC DISCHARGE REELS

Part Number	Clamp Type	Cable Length	Cable Type	Cable OD	Conductor C.S.A.	Housing Colour	Nett Weight
VESX41/M05	REB Plier Clamp	20ft (6.1mtr)	Galvanised Steel (uncoated)	3/32" (2.37mm)	4mm ²	Red	2.1kg
VESX07	Cling-On Heavy Duty Clamp	25ft (7.6mtr)	Galvanised Steel (orange nylon coated)	1/8" (3.18mm)	4mm ²	Red	2.5kg
VESX90/M07	Stainless Steel Heavy Duty Clamp	25ft (7.6mtr)	Galvanised Steel (orange nylon coated)	1/8" (3.18mm)	4mm ²	Red	2.65kg
VESX54	Heavy Duty Screwdown Clamp	25ft (7.6mtr)	Galvanised Steel (orange nylon coated)	3/32" (2.37mm)	4mm ²	Red	3.2kg
VESX08	Cling-On Heavy Duty Clamp	50ft (15.2mtr)	Galvanised Steel (uncoated)	3/32" (2.37mm)	4mm ²	Red	4.8kg
VESX55	Heavy Duty Screwdown Clamp	50ft (15.2mtr)	Galvanised Steel (uncoated)	3/32" (2.37mm)	4mm ²	Red	5.5kg
VESX33	Cling-On Heavy Duty Clamp	50ft (15.2mtr)	Galvanised Steel (clear nylon coated)	1/8" (3.18mm)	4mm ²	Orange	5.2kg
VESX34	Cling-On Heavy Duty Clamp	50ft (15.2mtr)	Stainless Steel (orange nylon coated)	1/8" (3.18mm)	4mm ²	Orange	5.2kg
VESX90/M34	Stainless Steel Heavy Duty Clamp	50ft (15.2mtr)	Stainless Steel (orange nylon coated)	1/8" (3.18mm)	4mm ²	Orange	5.2kg
VESX04/M19	Cling-On Heavy Duty Clamp	100ft (30.5mtr)	Galvanised Steel (clear nylon coated)	1/8" (3.18mm)	4mm ²	Red	10.15kg
VESX90/M19	Stainless Steel Heavy Duty Clamp	100ft (30.5mtr)	Galvanised Steel (clear nylon coated)	1/8" (3.18mm)	4mm ²	Red	10.15kg

Option VESE26 Stainless Steel Outer Enclosure for corrosive and hygienic areas (suits all 20ft & 25ft Reels)

All Static Discharge cables are multicore hi-tensile design
 Reels are PTB tested and approved for safe use in explosive atmospheres
 Certification Ⓢ II 2 GD T6

See clamp/cable datasheet for more detailed clamp specifications
 NB: Static Discharge Reel Housing Colour may be subject to change

